

INSTRUCTION MANUAL

BARROW IN A BOX 70 Model SS70

MANSS70 REV A 20/2/26



FOR ALL ISSUES PLEASE FIRST CONTACT SILVAN, DO NOT RETURN

CONTACT : SILVAN SERVICE SUPPORT

SILVAN AUSTRALIA PTY. LTD.

ABN 48 099 851 144

**AUSTRALIA
VICTORIA (HEAD OFFICE)**

Telephone: +61 (03) 9215
2700
1300 745826
www.silvan.com.au

SILVAN SERVICE SUPPORT
PH 1300 745 826 (AUST) OR 0508 745
826 (N.Z)
email: support@silvanaust.com
www.silvan.com.au/service-manuals/

NEW ZEALAND

Telephone: +64 (07)
8496030
www.silvannz.co.nz



Warnings

WARNING This wheelbarrow is designed and manufactured solely for the purpose of carrying material loads. Under no circumstances may it be used for any other purposes.

WARNING Only inflate the tyre after it is installed on the wheelbarrow. The maximum pressure is 137kpa (20psi). Use a foot pump or bicycle pump rather than compressed air.

Assembly Procedure

ASSEMBLE WITHOUT TIGHTENING THE BOLTS.

ONLY FULLY TIGHTEN THE BOLTS ONCE ALL THE PARTS HAVE BEEN FITTED TOGETHER.

It will also assist the process if you apply tape over the heads of the bolts in the tray to hold them in position while you assemble the wedges, handles and legs




Assembly -Cont



- 2 x 160mm Tray bottom to handles (Front).
- 2 x 100mm Tray bottom to handles (Rear)
- 2 x 90mm Axle
- 2 x 80mm Front stays to handle
- 20 x 70mm X-Member
- 2 x 40mm Bullbar
- 2 x 20mm Front stays to tray
- 14 x 8mm Nuts



- 1 Firstly the wedges
- 2 Slide the handles together and fit on top of wedges.
- 3 Fit the legs and loosely tighten nuts
- 4 Fit the cross member

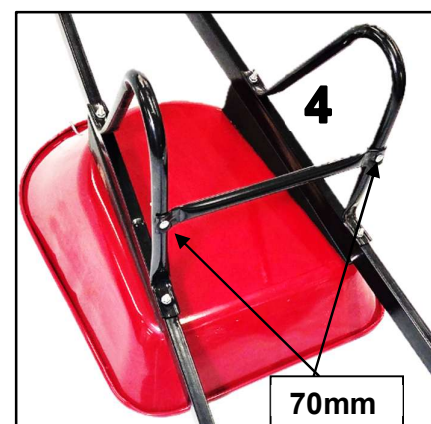

Assembly -Cont



5. Assemble the wheel and front stays and Bullbar
6. Fit the Front stays
7. Fit the Bullbar
8. Tighten all the nuts

